



Sony DSC-S85 Instructions for OneShot360

Recommended Camera Settings for OneShot360

- Use the Zoom to exactly fill the digital camera LCD viewer screen with the circular image. This is done by using the zoom on the back of the camera. If you zoom in too much, you will lose part of the field of view. If you zoom in too little, you will not get maximum resolution. Note also that the OneShot image may not be exactly centered in the LCD screen – this is normal.
- Make sure the flash is disabled by pressing the flash section (lightening bolt symbol) of the control button located to the left of the LCD screen until you see the “flash off” icon on the LCD.
- To focus your OneShot image with the Sony DSC-S85 camera, press the focus button and adjust the jog dial until the desired distance is shown on the LCD panel. We recommend a setting of 3 meters (or 9 3/4 ft.)
- Put your Sony DSC-S85 in aperture priority mode by turning the top mode dial to A mode which is the symbol for aperture priority.
- Then adjust the jog dial when you are at the f-stop setting press in on the jog dial and rotate up or down to adjust to an f-stop of 7.1.
- Note: aperture priority mode may not be suitable for low light or some indoor shooting conditions because the camera will not allow a shutter speed slower than 1/30 of a second while in this mode. This would mean the image would not be properly exposed if using a small aperture. To work around this limitation, you can use shutter priority mode, and use a shutter speed that would give you the desired f#. Also, make sure you are using a tripod when shooting with a slow shutter speed.

Press the MENU button and use arrow buttons to:

- Under the CAMERA menu, set the white balance. Auto is usually fine for most shots.
- Under the FILE menu, set the image size to 2272x1704 for best quality.
- Under the CAMERA menu, set the Sharpness to “0” for best compromise between tonal range and contrast.
- Select the self timer by pressing the bottom arrow on the control button. Pressing the bottom arrow again will shut the timer off.

Contact:

Metropole360

Email: support@metropole360.com

Web: <http://www.metropole360.com>

Phone: 212-980-2427